



Testing and Conformance Clarification-Request No.: 20071105-13

(Request-Nr, assigned by moderator: yyyyymmxx where xx=sequence# within the month)

Request from: Lischka@kieback-peter.de

Stage:

- Request
- Listed by moderator
- Analysis by (TGTC or individual):.....
- Resolved

Reference: [referenced document(s) with number and revision]
135.1 8.4.2 and 8.5.2

Background:

Wrong Status-Flags for FAULT-state

Question / proposed solution:

If Fault-alarms is to be tested:

VERIFY Status_Flags = (FALSE, TRUE, ?, ?)

Must be changed to read:

VERIFY Status_Flags = (TRUE, TRUE, ?, ?)

A Fault alarm changes the alarm-flag in the status-flags property.

Response:

[By BIG-EU TGTC or by BTL-WG]

[BTL-WG] Test 8.4.2 has already addressed this issue and the corrected version of the test is included in the new BTL Test Package (4.0.3). Test 8.5.2 uses the 8.4.2 test steps so no further action is necessary.